



**Legend**

- Vesterhav Nord site boundary
- Wind turbine generator (WTG) location
- Indicative array cable
- Indicative export cable (offshore)
- Indicative export cable (onshore)
- Transition joint (TJ) location
- Onshore substation location

WTG ID	ETRS89/UTM32N	
	X	Y
1	440016	6265245
2	440031	6266340
3	440047	6267435
4	440062	6268530
5	440078	6269625
6	440093	6270720
7	440109	6271814
8	440124	6272909
9	440140	6274004
10	445879	6283122
11	445548	6282178
12	445217	6281235
13	444887	6280291
14	444556	6279347
15	444225	6278404
16	443894	6277460
17	443563	6276516
18	443233	6275572
19	442902	6274629
20	442571	6273685
21	440155	6275099

Do not generate vector points from the coordinates in this table. GIS vector data is available upon request from the Vattenfall GIS team.

VKF-VHN-TA-0100-A-LVEN0026\_ForWeb  
 Layout: LVEN0026  
 Projection: ETRS89 UTM32N  
 Figure produced by BA Wind GIS Team.  
 © Contains data from Styrelsen for Dataforsyning og Effektivisering, DTK Kort100 Print, Jan 2018, © Vattenfall Wind Power Ltd 2018.

Scale 1:100,000 (when printed at A4)

